



## Standard Operating Procedure Installation of the Vapor Pin® Insert

December 2018

### Scope:

This standard operating procedure describes the installation of the Vapor Pin® Insert (Figure 1).

### Purpose:

The purpose of this procedure is to assure good quality control in field operations and uniformity between field personnel in the use of the Vapor Pin® Insert. The Vapor Pin® Insert is used to facilitate the collection of soil gas samples and pressure measurements beneath engineered vapor intrusion barriers (e.g., Geo-Seal®), or vapor mitigation coatings (e.g., Retro-Coat™).

### Equipment Needed:

- Vapor Pin® Insert;
- Vapor Pin® Insert Cap;
- Hacksaw (optional);
- Power drill and small diameter bits (optional);
- Threaded rod (1/2" x 13); and
- Dead blow hammer.

### Installation Procedure (New Construction):

- 1) Check for buried obstacles (pipes, electrical lines, etc.) prior to proceeding.
- 2) Locate the desired position (horizontally and vertically) of the top of the Vapor Pin® Insert.


- 3) Pierce the barrier with a threaded rod of sufficient length to extend slightly above the elevation of the finished floor and into the subgrade a sufficient depth to provide support for the Vapor Pin® Insert. Make sure the rod is perpendicular to the proposed floor surface. Avoid bending the rod, as it may inhibit its removal after the concrete has cured. Also avoid damaging the threads on the rod.
- 4) Dry fit the Vapor Pin® Insert and trim, or extend the length, and add vent holes as necessary.
- 5) Assemble the Vapor Pin® Insert and Cap by pressing the Cap into the top of the Insert. Position the assembly on the threaded rod so that the top of the Cap lies flush with the elevation of the finished floor. It is important that the position of the Insert be perpendicular to the slab so that the Vapor Pin® Secure Cover meets uniformly with the floor.
- 6) Marry the barrier to the Insert per the manufacturer's specification prior to pouring the concrete slab.
- 7) After the concrete has set, remove the threaded rod and Cap and install the Vapor Pin® or FLX-VP Vapor Pin® product in the Insert.

### Installation Procedure (Existing Construction):

- 1) Check for buried obstacles (pipes, electrical lines, etc.) prior to proceeding.

VAPOR PIN® protected under US Patent # 8,220,347 B2, US 9,291,531 B2 and other patents pending

- 2) Prior to installation in an existing slab, a large diameter hole must be cored through the slab to either expose the barrier, or provide access to the base beneath the slab prior to the application of a vapor mitigation coating. Contact the vendor of the barrier or coating about the desired diameter of the hole, the procedures used to expose the seal, and the methods and materials used to marry the seal or coating to the Insert prior to proceeding.
- 3) Locate the desired position (horizontally and vertically) of the top of the Vapor Pin® Insert.
- 4) Pierce the barrier (if applicable) with a threaded rod of sufficient length to extend slightly above the elevation of the finished floor and into the subgrade a sufficient depth to provide support for the Vapor Pin® Insert. Make sure the rod is perpendicular to the proposed floor surface. Avoid bending the rod, as it may inhibit its removal after the concrete has cured. Also avoid damaging the threads on the rod.
- 5) Dry fit the Vapor Pin® Insert and trim, or extend the length, and add vent holes as necessary.
- 6) Assemble the Vapor Pin® Insert and Cap by pressing the Cap into the top of the Insert. Position the assembly on the threaded rod so that the top of the Cap lies flush with the elevation of the finished floor. It is important that the position of the Insert be perpendicular to the slab so that the Vapor Pin® Secure Cover meets uniformly with the floor.
- 7) If the Insert is used in conjunction with a vapor intrusion barrier, marry the barrier to the Insert per the barrier manufacturer's specification prior to pouring the concrete slab.
- 8) After the concrete has set, remove the threaded rod and Cap and install the Vapor Pin® or FLX-VP Vapor Pin® product in the Insert.

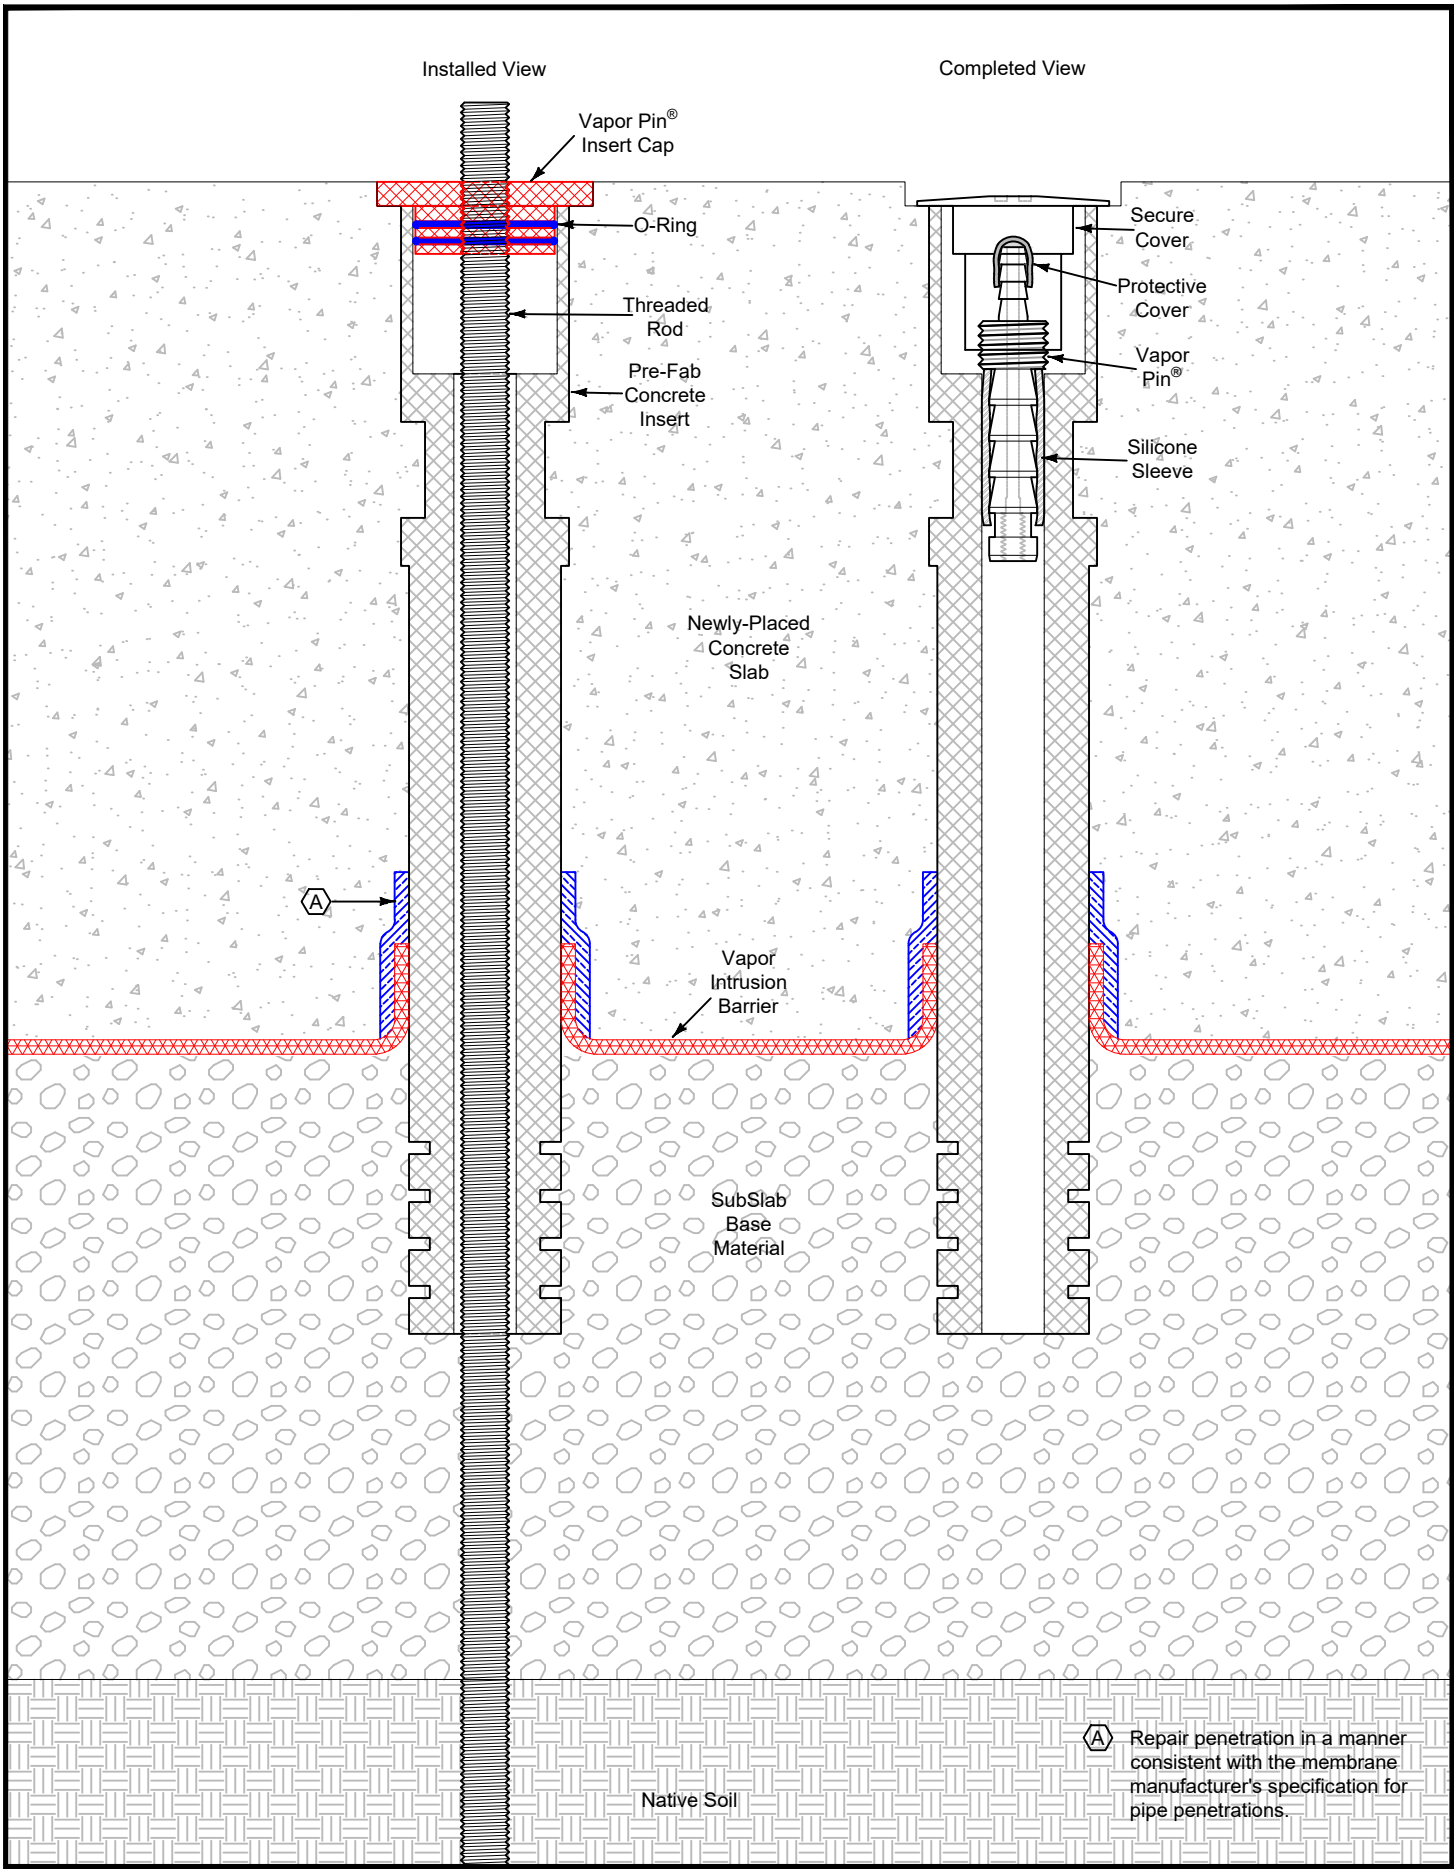

A Repair penetration in a manner consistent with the membrane manufacturer's specification for pipe penetrations.



Vapor Pin® Insert with Cap,  
Vapor Pin Enterprises, Inc.

Figure  
1